

# **USER MANUAL**

## **GW Plus Series Hybrid Inverter**



# CONTENTS

<b>ABOUT THIS MANUAL</b> .....	1
Purpose.....	1
Scope .....	1
<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	1
General Precautions .....	1
Personal Precautions.....	2
<b>INSTALLATION</b> .....	3
Unpacking and Inspection.....	3
Basic Configuration.....	3
Batteries .....	4
Battery Cable Size .....	6
DC Disconnect and Over-Current Protection .....	6
Battery Cable Connection .....	6
AC Cable Size.....	7
AC Connections .....	7
Machine panel introduction .....	9
<b>OPERATION</b> .....	11
Front Panel and Configuration Switch .....	11
Setting Indicators .....	12
LCD display meaning.....	17
Table 5. display meaning .....	17
Operating Indicators.....	18
Table 6 Fault code meaning.....	19
<b>SPECIFICATIONS</b> .....	20
Table 7. Line Mode Specifications .....	20
Table 8. Invert Mode Specifications .....	21
Table 9. AC Charger Mode Specifications .....	22
Table 10. Solar Charger Mode Specifications.....	22
Table 11. General Specifications.....	23
<b>APPENDIX A</b> .....	24
How to Select and Configure PV Panels .....	24
<b>DISPOSAL</b> .....	26

# ABOUT THIS MANUAL

## Purpose

The purpose of this manual is to provide explanations and procedures for installing, operating and troubleshooting for the unit. This manual should be read carefully before installations and operations. Please retain this manual for future reference.

## Scope

This document defines the functional requirements of the unit, intended for worldwide use in electronic processing equipment. All manuals are applicable under all operating conditions when installed in the End Use system, unless otherwise stated.

# IMPORTANT SAFETY INSTRUCTIONS



**WARNING:** This chapter contains important safety and operating instructions. Read and keep this User Guide for future reference.

## General Precautions

1. Before using the unit, read all instructions and cautionary markings on:  
(1) The unit (2) the batteries (3) all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not expose the unit to rain, snow or liquids of any type. The unit is designed for indoor use only. Protect the unit from splashing if used in vehicle applications.
4. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
5. To reduce risk of electric shock, disconnect all wiring before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
6. **CAUTION** --Battery are not already installed by the supplier only a qualified professional (e.g. service person) may install the Inverter.
7. **WARNING: WORKING IN VICINITY OF A LEAD ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL OPERATION.** Provide ventilation to outdoors from the battery compartment. The battery enclosure should be designed to prevent accumulation and concentration of hydrogen gas in "pockets" at the top of the compartment. Vent the battery compartment from the highest point. A sloped lid can also be used to direct the flow to the vent opening location.
8. **NEVER** charge a frozen battery.
9. No terminals or lugs are required for hook-up of the AC wiring. AC wiring must be no less than 10 AWG gauge copper wire details refer to table 2. Battery cables must be rated for 35mm or higher and should be no less than table 1. Crimped and sealed copper ring terminal lugs with a HRNB38-8 hole should be used to connect the battery cables to the DC terminals of the unit. Soldered cable lugs are also acceptable.
10. Be extra cautious when working with metal tools on, or around batteries. The potential exists to drop a tool and short-circuit the batteries or other electrical parts resulting in sparks that could cause an explosion.

11. No AC or DC disconnects are provided as an integral part of this unit. Both AC and DC disconnects must be provided as part of the system installation. See INSTALLATION section of this manual.
12. Fuses are provided as the over current protection of the battery supply.
13. When PV module or panel is exposed to light, it starts to supply high DC voltage, be sure to turn off DC switch before commencing the maintenance, and make sure the cables from PV panel are properly sealed after disconnection.
14. **GROUNDING INSTRUCTIONS** -This battery charger should be connected to a grounded permanent wiring system. For most installations, the Ground Lug should be bonded to the grounding system at one (and only one point) in the system. All installations should comply with all national and local codes and ordinances.
15. **AVOID** AC output short-circuit; avoid DC input short-circuit and do not connect the mains while DC input short-circuit
16. **Warning:** The maintenance information is only to service persons, If the product is used in a manner which is not covered by the scope of warranty, the protection provided by the product may be impaired.

## Personal Precautions

1. Someone should be within range of your voice to come to your aid when you work near batteries.
2. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
3. Wear complete eye protection and clothing protection. Avoid touching eyes while working near batteries. Wash your hands when done.
4. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eyes, immediately flood eyes with running cool water for at least 15 minutes and get medical attention immediately.
5. Baking soda neutralizes lead acid battery electrolyte. Keep a supply on hand in the area of the batteries.
6. NEVER smoke or allow a spark or flame in vicinity of a battery or generator.
7. Be extra cautious when working with metal tools on, and around batteries. Potential exists to short-circuit the batteries or other electrical parts which may result in a spark which could cause an explosion.
8. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with battery. Battery can produce short-circuit current high enough to weld a ring, or the like, to metal causing severe burns.
9. If a remote or automatic generator start system is used, disable the automatic starting circuit and/or disconnect the generator from its starting battery while servicing to prevent accidental starting during servicing.

# INSTALLATION

## Unpacking and Inspection

Carefully unpack the inverter/charger from its shipping carton.

Verify all of items list below are present. Please call customer service if any items are missing.

- The unit
- 1 user's manual

## Basic Configuration

GW Plus Series hybrid Inverter is designed to serve as a backup power supply for AC loads. The input power of GW Plus Series hybrid Inverter comes from PV system and AC grid which not only supply power to AC loads but also charge the battery bank when the power from AC grid or AC generator is present (also known as Line Mode).

In the event of AC grid (or AC generator) outage, the AC loads can be alternatively powered by PV system (if the illumination is sufficient) and battery bank.

The following illustrations show basic applications for GW Plus Series hybrid Inverter.

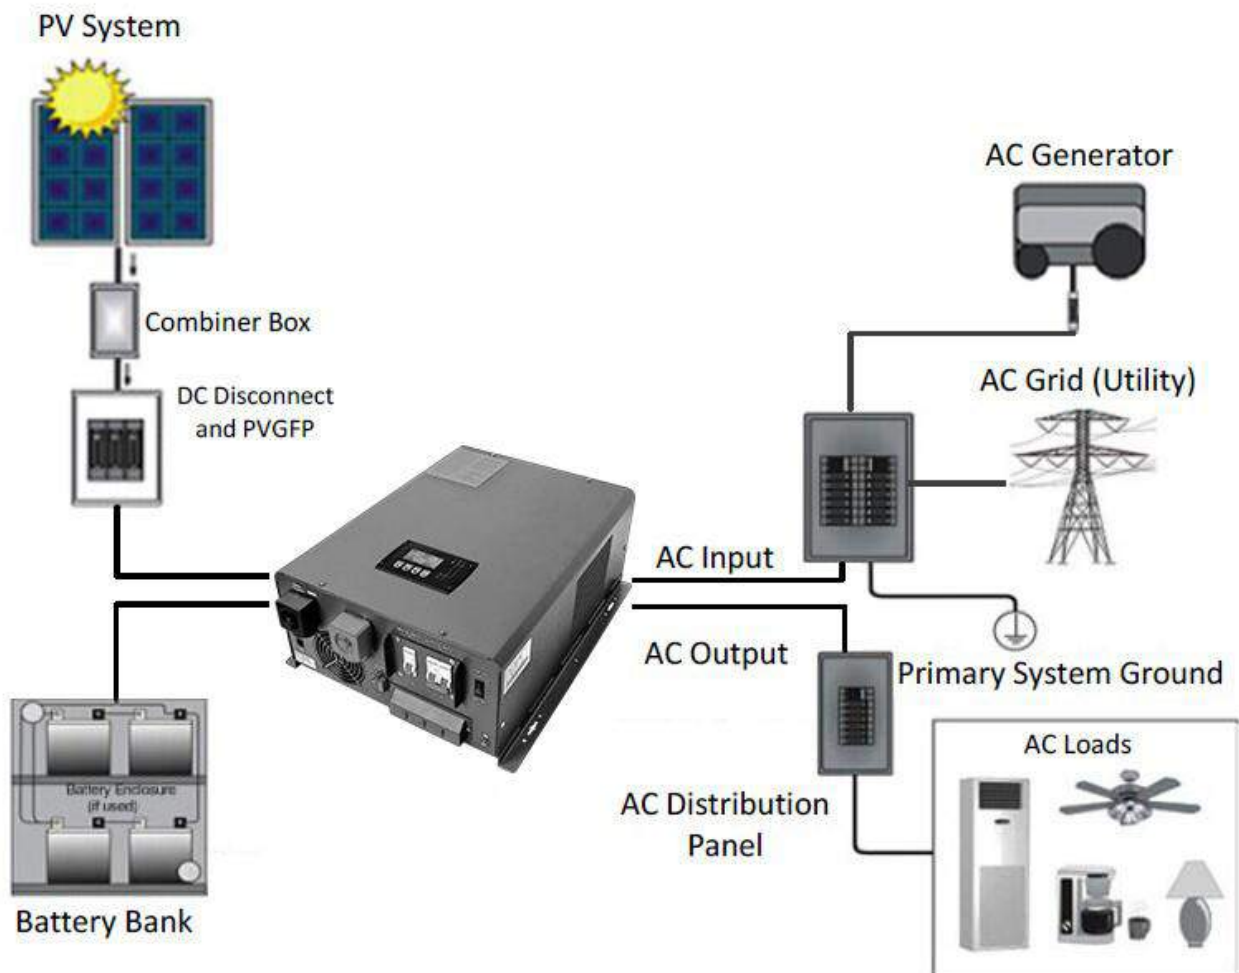


Figure 1. Typical Application of GW Plus series hybrid Inverter

Note: Appliances like Air conditioner needs at least 3 minutes to restart in case of a power shortage occurs in a way that the power turns off then back on again rapidly (time is required to balance the refrigerant gas in inside circuit); so in order to protect your Air conditioner, please consult the Air conditioner manufacturer whether they have already provided time delay function before installing. Otherwise, Inverter will trig overload fault and shut off its output to protect your appliance but sometimes it is not enough and your Air conditioner can be damaged internally beyond repair.

## Batteries

The unit support 12volt,24volt or 48vlot battery bank. Please wiring battery correctly. Before proceeding, ensure you have appropriate size batteries for this inverter. The unit can use flooded lead-acid, or sealed GEL/AGM lead-acid batteries so ensure that your batteries are in one of these categories. GW Plus inverter with built-in MPPT solar controller, for the battery and solar panel connection please refer to figure 2,figure3 and figure4. If with the built-in 48 MPPT 40A solar charge controller, then please configure solar panels more than 2350W, otherwise it can not reach the maximum charge current, if with the built-in 48 MPPT 60A solar charge controller, then please configure solar panels more than 3500W, otherwise it can not reach the maximum charge current.

Note: if you are using a gel battery or a deep cycle battery, please do not use ordinary lead-acid batteries for use in solar energy systems. This is likely to damage the lead acid battery or to reach the desired effect.

The battery must be wired to match with the DC input voltage. Recommend to use battery capacity more than 200AH .

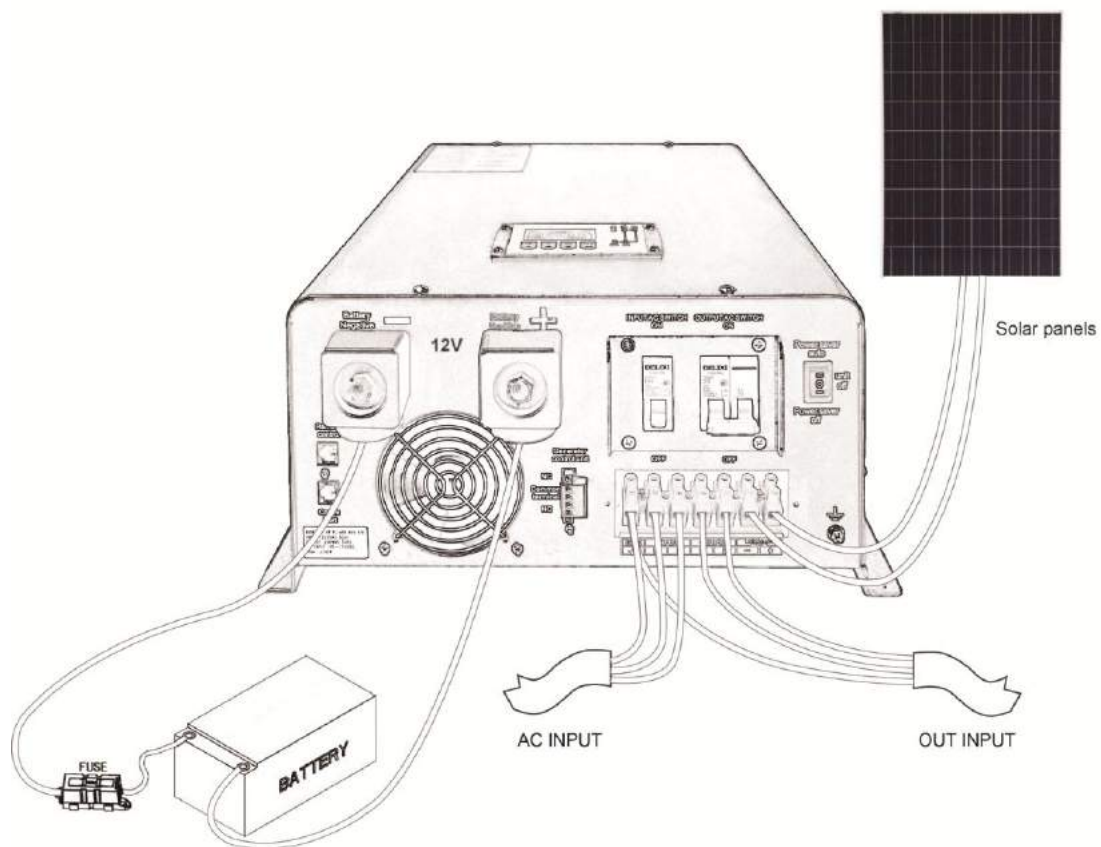


Figure 2. GW Plus 12V solar inverter system- the connection diagram of solar panel and battery

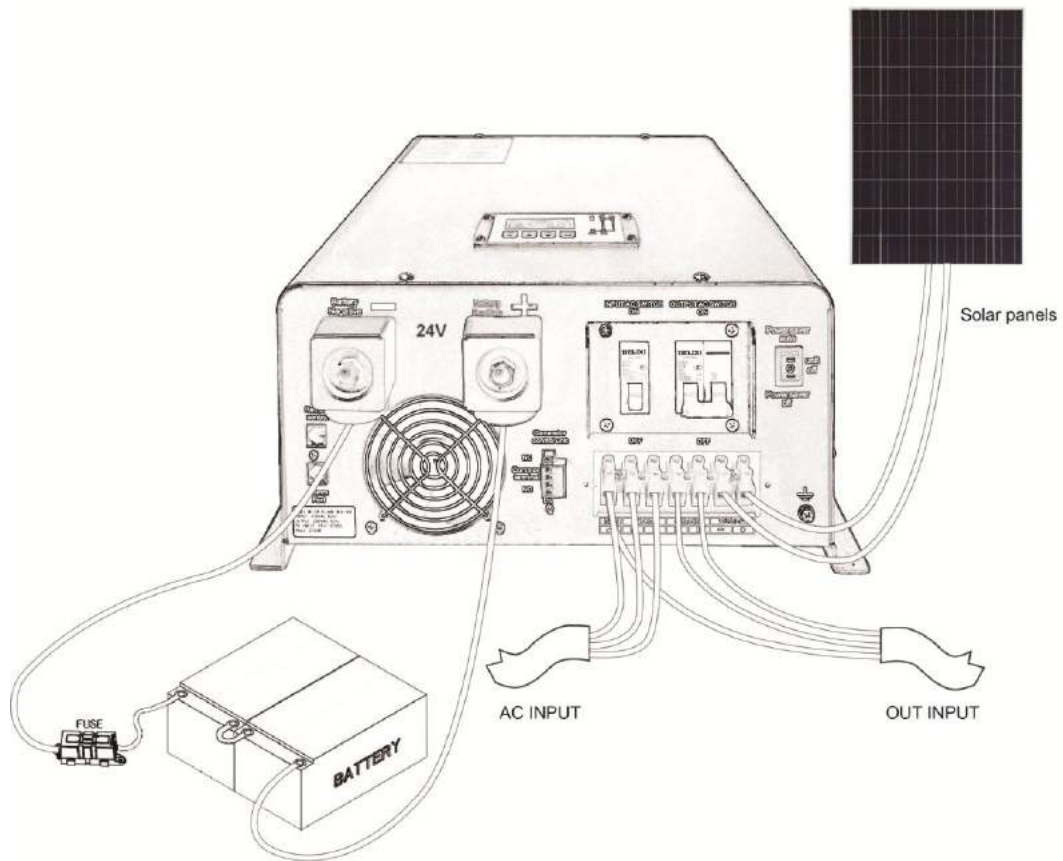


Figure 3. GW Plus 24V solar inverter system- the connection diagram of solar panel and battery

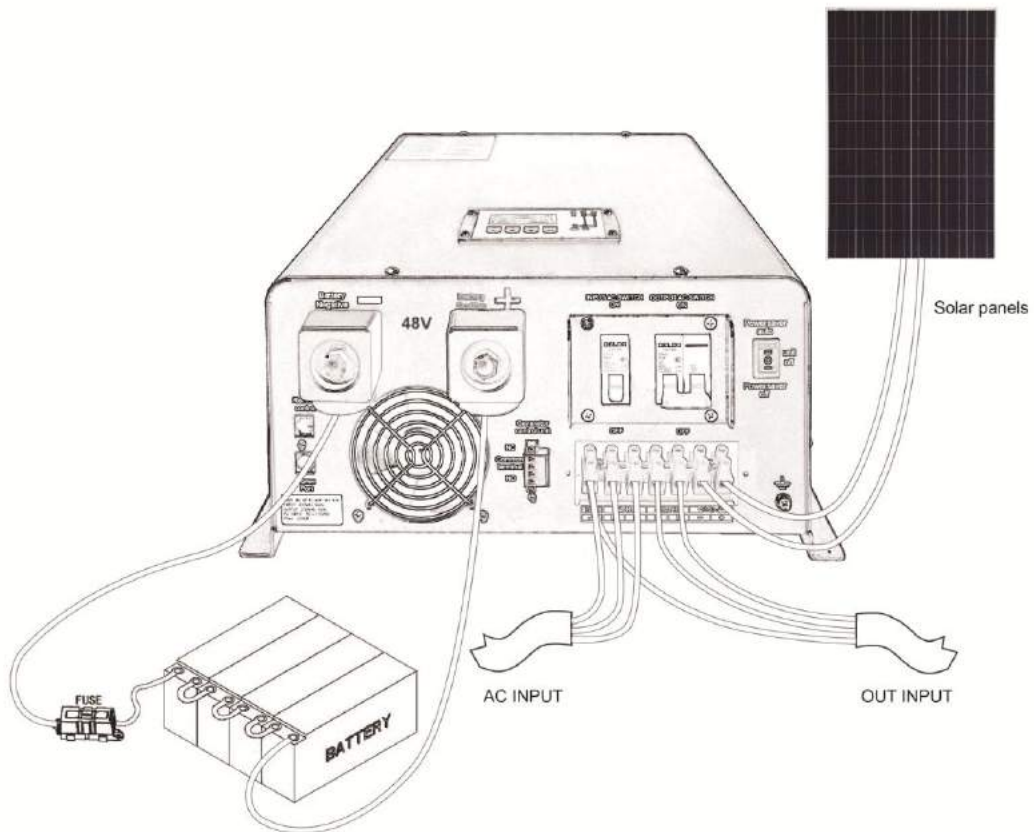


Figure 4. GW Plus 48V solar inverter system- the connection diagram of solar panel and battery

## Battery Cable Size

Below table 1 you can find information for recommended battery cable and terminal.

Table 1. Recommended battery cable and terminal size

Model Number	DC Voltage	Typical Amperage	Battery Capacity	1~3 m one-way	0.5 m one-way	Cable Terminal
GW Plus 1KW GW Plus 2KW GW Plus 4KW	12V 24V 48V	120A	200AH	25mm <sup>2</sup>	25mm <sup>2</sup>	RNBS38-8
GW Plus 5KW	48V	150A	200AH	35mm <sup>2</sup>	25mm <sup>2</sup>	RNBS38-8
GW Plus 1.5KW GW Plus 3KW GW Plus 6KW	12V 24V 48V	175A	200AH	50mm <sup>2</sup>	35mm <sup>2</sup>	RNB60-8/RNBS38-8
GW Plus 2KW GW Plus 4KW GW Plus 8KW	12V 24V 48V	225A	200AH	50mm <sup>2</sup>	35mm <sup>2</sup>	RNB60-8/RNBS38-8
GW Plus 5KW GW Plus 10KW	24V 48V	275A	200AH	75mm <sup>2</sup>	50mm <sup>2</sup>	RNB80-8/RNB60-8
GW Plus 3KW GW Plus 6KW GW Plus 12KW	12V 24V 48V	315A	200AH	75mm <sup>2</sup>	50mm <sup>2</sup>	RNB80-8/RNB60-8

## DC Disconnect and Over-Current Protection

For safety and to comply with regulations, battery over-current protection and disconnect devices are required. Fuses and disconnects must be sized to protect the DC cable size used, and must be rated for DC operation. Do not use devices rated only for AC service – they will not function properly.

Note that some installation requirements may not require a disconnect device, although over-current protection is still required.

## Battery Cable Connection

Observe Battery Polarity! Place the ring terminal of DC cable over the bolt and directly against the unit's battery terminal. Tighten the M8 screw with 6-10 Nm. Do not place anything between the flat part of the Backup System terminal and the battery cable ring terminal or overheating may occur.

**DO NOT APPLY ANY TYPE OF ANTI-OXIDANT PASTE TO TERMINALS UNTIL AFTER THE BATTERY CABLE WIRING IS TORQUED!!**

**WARNING: Shock Hazard**

Installation must be performed with care for the high battery voltage in series.



**Caution!!** Do NOT place anything between battery cable ring terminals and terminals on the inverter. The terminal screw is not designed to carry current.

Apply Anti-oxidant paste to terminals AFTER terminals have been screwed.

Verify that cable lugs are flush with the battery terminals. Tighten battery cables to terminals (6-10 Nm).



## AC Cable Size

Before wiring the input and output of inverter, refer to table 2 for minimum recommended cable size and torque value

Table 2. Recommended cable size and torque value for AC wire

Model Number	Typical Amperage	AC Input	AC Output	Torque value
GW Plus 1KW 230Vac	10A	12AWG	14AWG	1.5~2.0 Nm
GW Plus 1.5KW 230Vac	12A	12AWG	14AWG	1.5~2.0 Nm
GW Plus 2KW 230Vac GW Plus 1KW 110Vac	15A	12AWG	12AWG	1.5~2.0 Nm
GW Plus 3KW 230Vac GW Plus 1.5KW 110Vac	20A	12AWG	12AWG	1.5~2.0 Nm
GW Plus 4KW 230Vac GW Plus 2KW 110Vac	32A	12AWG	12AWG	1.5~2.0 Nm
GW Plus 5KW 230Vac	40A	12AWG	12AWG	1.5~2.0 Nm
GW Plus 6KW 230Vac GW Plus 3KW 110Vac	50A	10AWG	12AWG	1.5~2.0 Nm
GW Plus 8KW 230Vac GW Plus 4KW 110Vac	60A	10AWG	10 AWG	2.0~2.5 Nm
GW Plus 10KW 230Vac GW Plus 5KW 110Vac	70A	8AWG	10 AWG	2.0~2.5 Nm
GW Plus 12KW 230Vac GW Plus 6KW 110Vac	80A	6AWG	8AWG	2.0~2.5 Nm

## AC Connections

Installation should be done by a qualified electrician. Consult local code for the proper wire sizes, connectors and conduit requirements.

On the left of rear chassis is the AC hardwire cover. Two three-station terminal block is provided to make the AC connections. The terminal block is used to hardwire the AC input, AC output, and ground. The National Electrical Code requires that an external disconnect switch be used in the AC input wiring circuit. The AC breakers in a sub panel will meet this requirement.

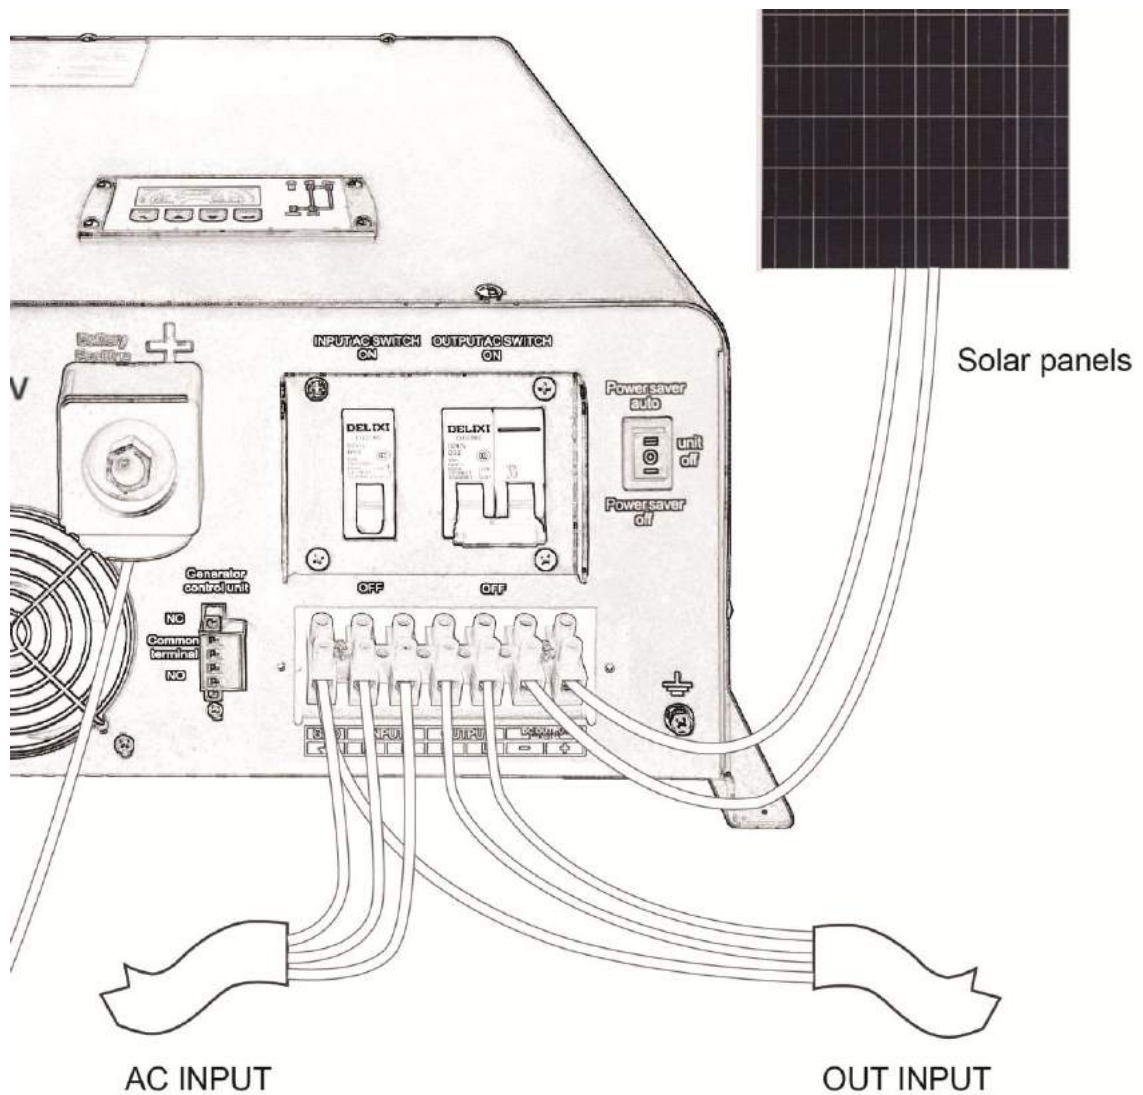


Figure 5. AC Cable Connect to unit

Step 1: Disconnect the unit from the battery by removing the battery cables. Turning off the unit before disconnect from the battery.

Step 2: Following the wiring guide located in the AC input wiring compartment as figure 5, connect the GND (green/yellow), Line (brown), and neutral (blue) wires from the AC input (utility, generator, etc) to the terminal block.

**⚠ Caution!!** Be sure that AC source is disconnected before attempting to hardwire it to the unit.

Step 3: Connect the AC Line output wiring to the terminal marked AC Line (output), following the wiring guide inside the compartment. Torque the wires into the terminal block.

Step 4: Lock the AC covers.

# Machine panel introduction

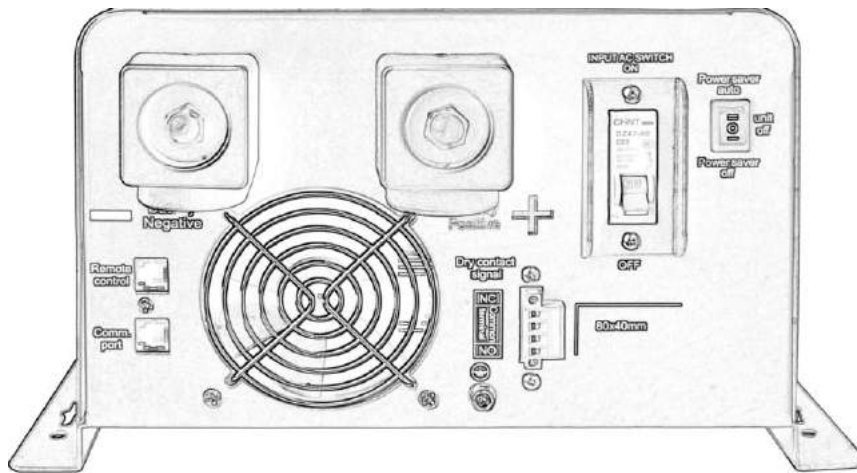


Figure 6. GW Plus1-3KW Front panel

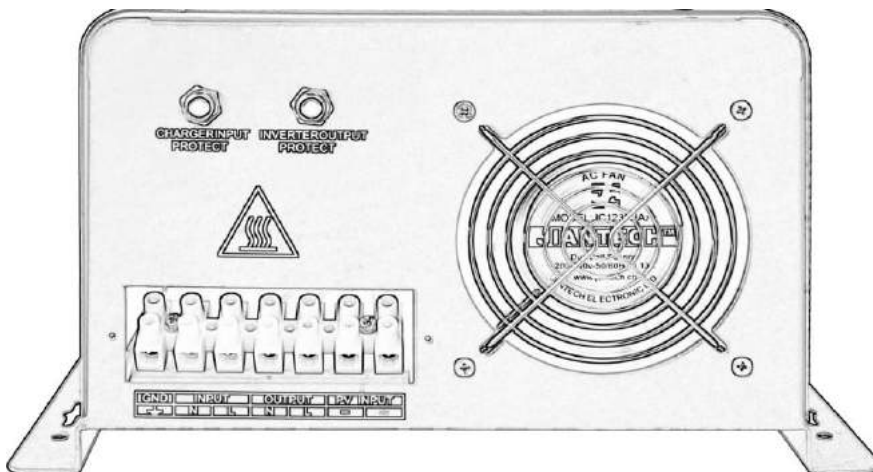


Figure 7. GW Plus1-3KW Back panel

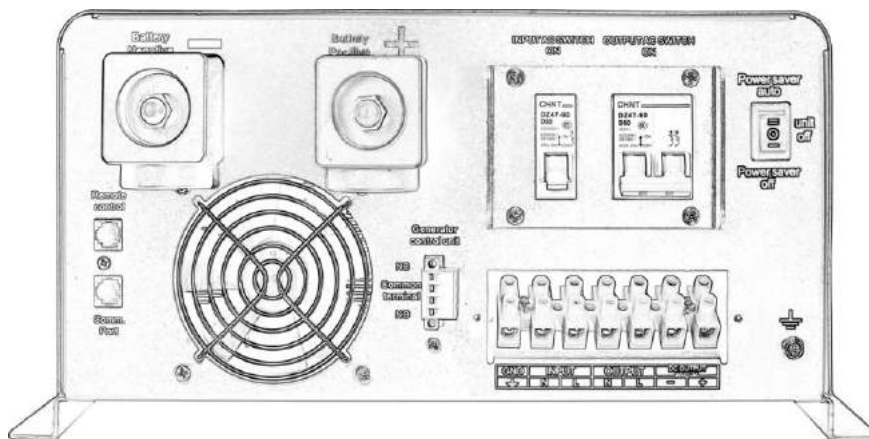


Figure 8. GW Plus4-6KW Front panel

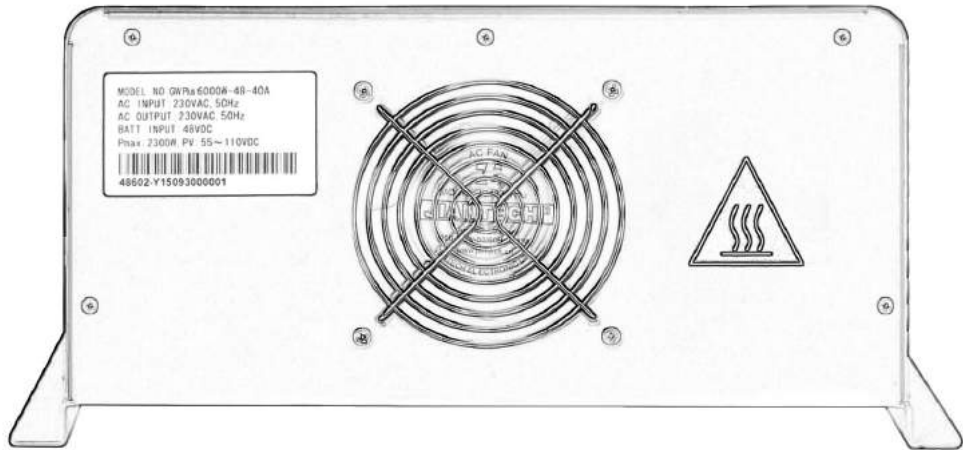


Figure 9. GW Plus4-6KW Back panel

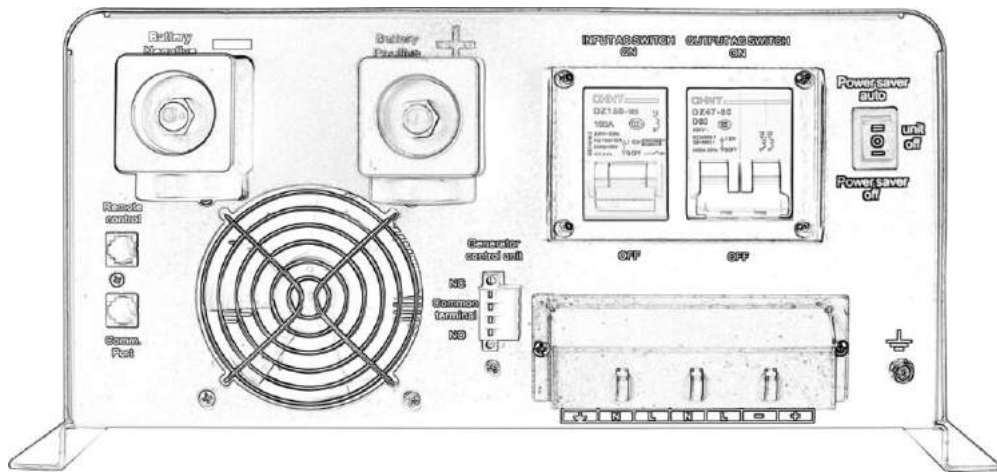


Figure 10. GW Plus8-12KW Front panel

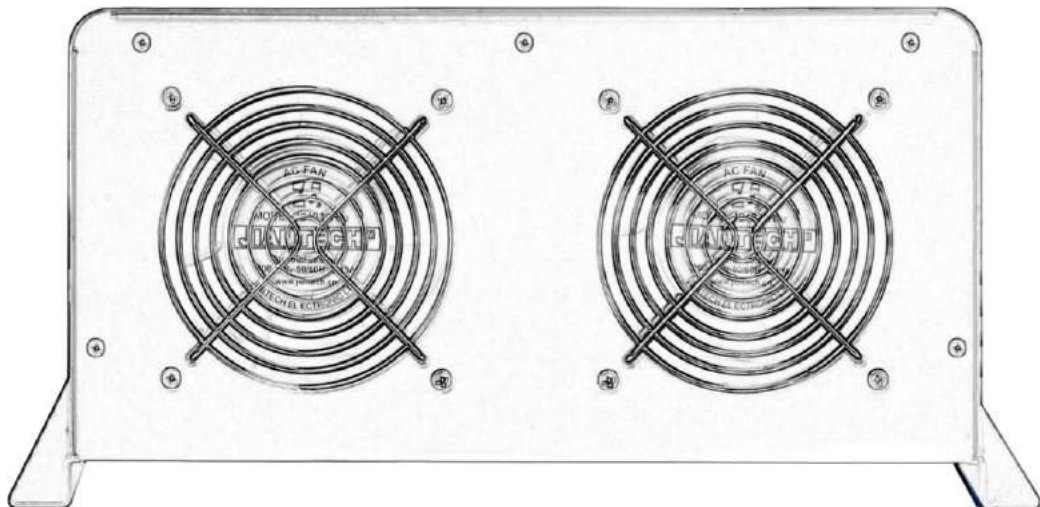


Figure 11. GW Plus8-12KW Back panel

# OPERATION

## Front Panel and Configuration Switch



Table 3. Configuration button function

Switch	Description
<b>CONF</b>	long press "1S" button to enter the setting interface, can be used for selecting different contents( Voltage, frequency, charging current...)
<b>Up SELECT</b>	Up SELECT button can be used for selecting parameter on the function setting mode
<b>Down SELECT</b>	Down SELECT button can be used for selecting parameter on the function setting mode
<b>ENTER</b>	Confirm, data save function


LED Indicator	
LED	Description
PV-LED	GREEN LED Lighting on PV normal
Battery-LED	YELLOW LED lighting on Battery normal
AC-LED	GREEN LED lighting on AC Line Mode
INV-LED	GREEN LED lighting on Battery Inverter Mode
Alarm-LED	RED LED lighting on Alarm

## Setting Indicators


Table 4. Configuration option

NO.	Description	Selectable option
1	Input voltage setting	Wide/Normal.
2	Output voltage setting	208/220/230/240Vac.
3	Output frequency setting	50/60Hz/Automatic.
4	AC charge on, off	AC charge on/AC charge off.
5	AC Charger current setting	20A/35A/50A/70A/90A
6	DC/AC/ Intelligent mode selection setting	DC mode priority / AC mode priority, Intelligent mode.
7	DC conversion voltage point setting	11.0Vdc/11.5Vdc/12.0Vdc.

### 1. Input voltage range Setting




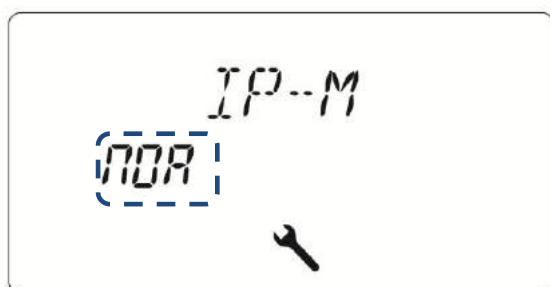


Narrow range mode

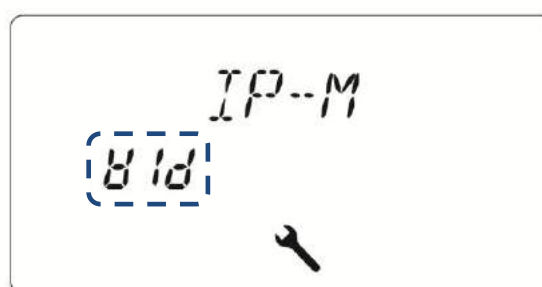




Wide range mode

## 2. Output voltage Setting

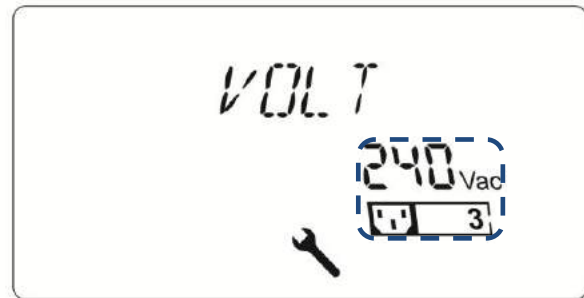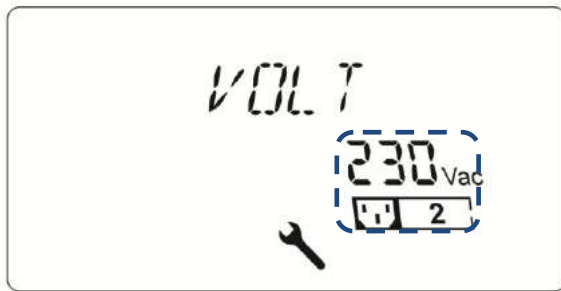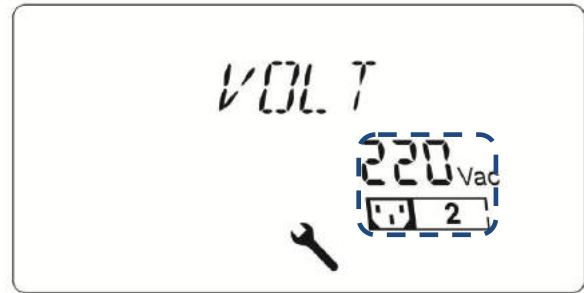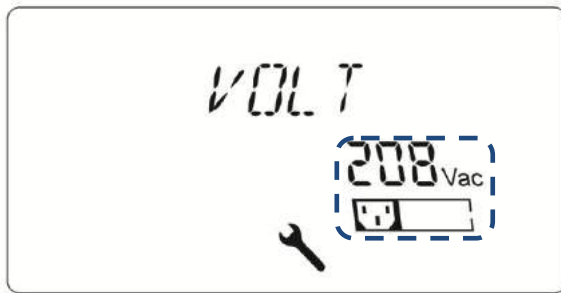


208Vac/220Vac/230Vac/240Vac four kinds of output voltage can be set.

## 3. Output frequency Setting

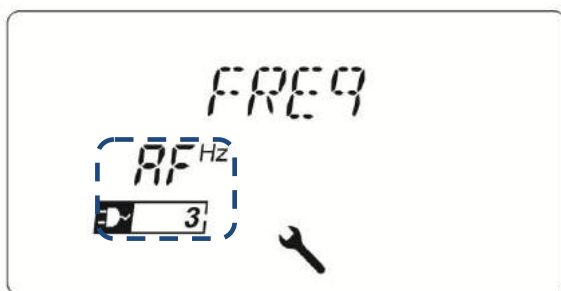
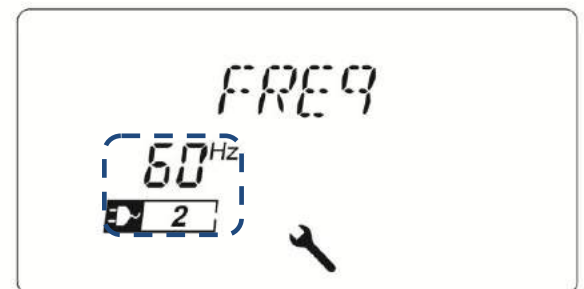
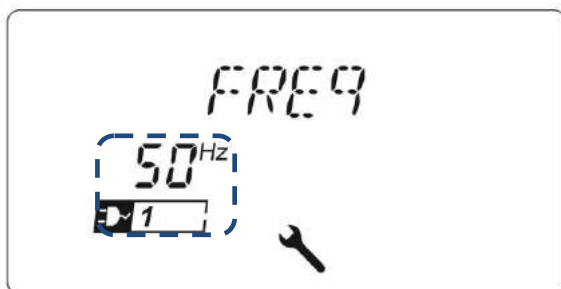


50/60Hz frequency output can be adjusted, as well as the adaptive AC input frequency.

#### 4. AC charger ON/OFF Setting

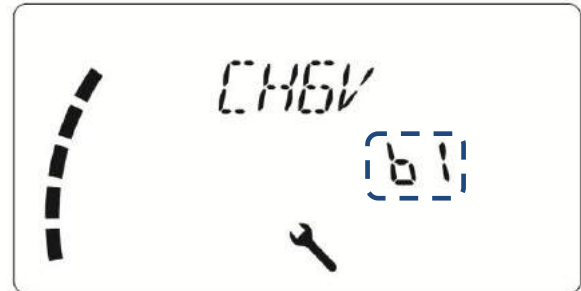

#### 5. AC Charger current Setting

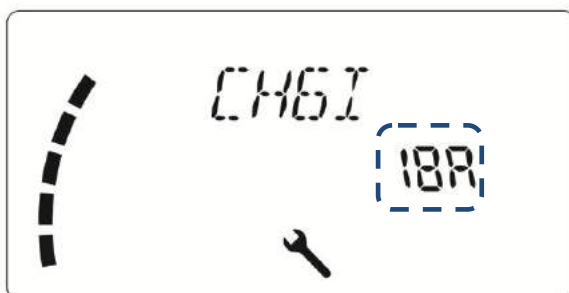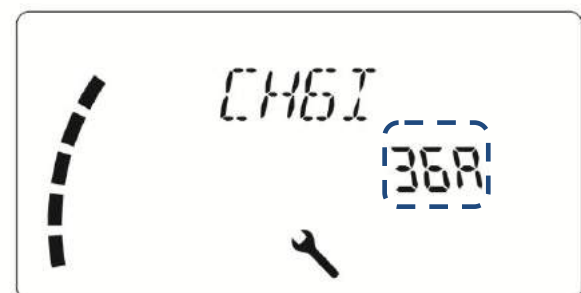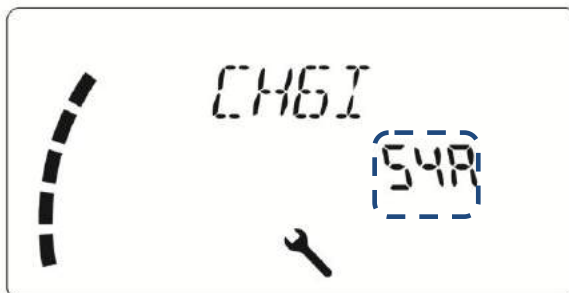

Maximum rated charge current can be divided into 5 different stall for adjusting

20A charger can be adjusted into 4A/8A/12A/16A/20A

35A charger can be adjusted into 7A/14A/21/28A/35A.

50A charger can be adjusted into 10A/20A/30A/40A/50A.

70A charger can be adjusted into 14A/28A/42A/56A/70A.


90A charger can be adjusted into 18A/36A/54A/72A/90A.



6. DC/AC/ Intelligent mode selection setting















AC mode priority

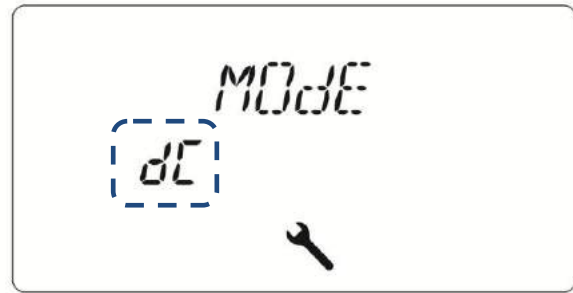

DC mode priority

7. Battery capacity setting

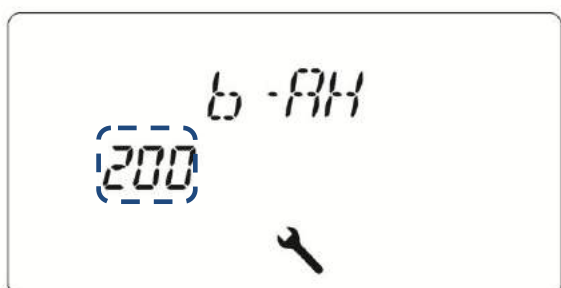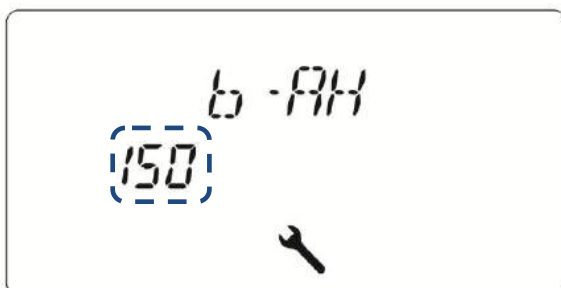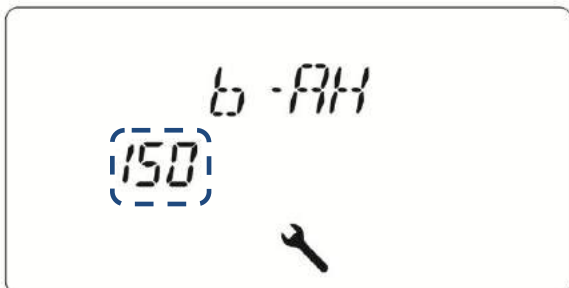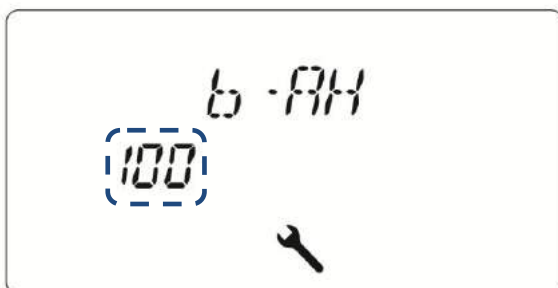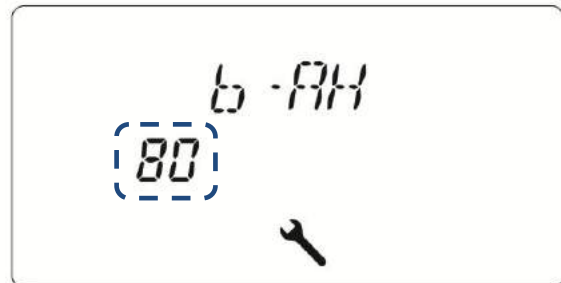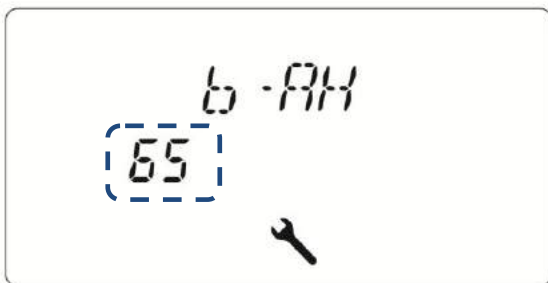

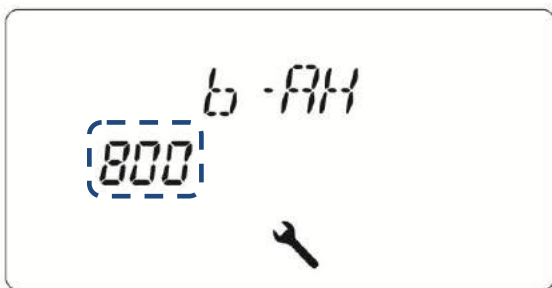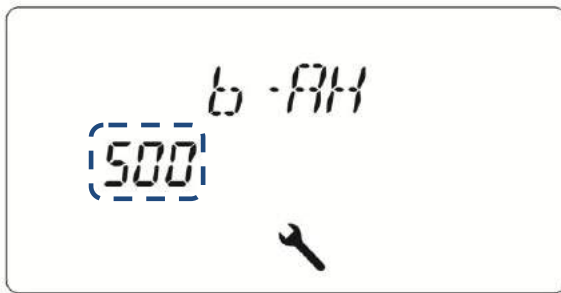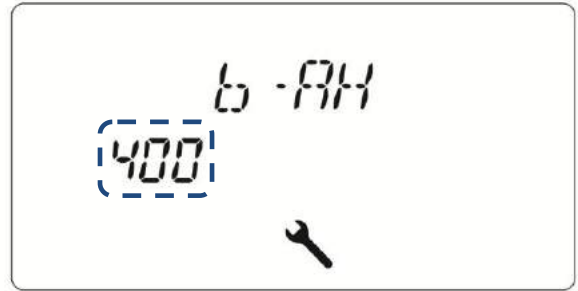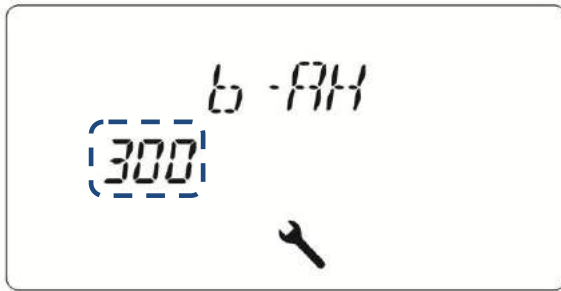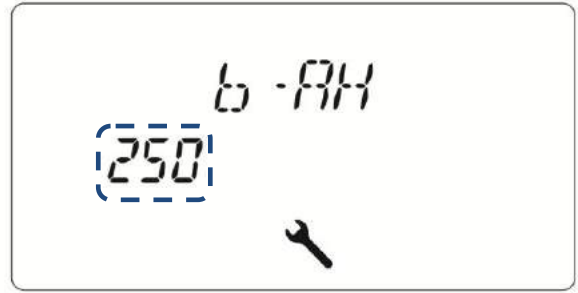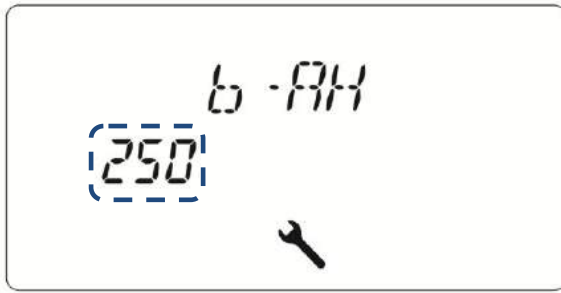








11 kinds of battery capacity settings,  
65AH,80AH,100AH,150AH,200AH,250AH,300AH,400AH,500AH,600AH,800AH.









## LCD display meaning

**Table 5. display meaning**

	When inverter is faulty, this sign will appear.
	When the inverter enter the setup interface, this flag will appear.
	Battery capacity display.
	Load capacity display.
	Display AC input voltage and frequency, will change to the other info in every 3s.
	Display AC output voltage and frequency, will change to the other info in every 3s.
	Working mode and fault code.







### Battery indicator:

Battery capacity segment will lighting to comply with battery voltage.

Battery voltage	>26V	25V~26V	24V~25V	23V~24V	21.6V~23V	20V ~21.6V	<20V
							
ALARM	--	--	--	--		1beep/2s	continue

### Load indicator:

The load indicate the load percentage comply with load VA or W (show the bigger value),the overload label will flash when overload.

Load(±4%)	>85%	65%~85%	45%~65%	25%~45%	0%~25%
					

## Operating Indicators

### AC Mode:

Inverter AC mode, bypass output, mains and battery indicator light



### DC Mode:

Battery inverter mode, inverter output, the inverter and battery indicator light



### AC + PV mode:

.AC input and PV charging battery,indicator light.



### PV+DC Mode:

.PV charging battery, battery invert output, PV and battery mode indicator light.



### PV Mode:

Inverter without work, PV charging battery, PV and battery mode indicator light.



### Fault Mode:

Inverter fault. fault indicator light and buzzer alarming



**Table 6 Fault code meaning**

<b>Fault code</b>	<b>Fault</b>	<b>Reason and Solution</b>
<b>F01</b>	Over temperature, fan fault (alarm light on)	Inverter operate environment is very bad, insufficient ventilation and indoor temperature is very high. Close the inverter and wait for 10 minutes, after inverter cool, start again, if fan fault, please replace with a new fan.
<b>F02</b>	Overload (alarm light on)	Connecting load power is over than inverter's rated power, if reduce the load equipments quantity, inverter will work again.
<b>F03</b>	Output short circuit (alarm light on)	Close the inverter and disconnect all load equipment, inspect load equipments if any of them had fault or internal short circuit, then start the inverter again. If still fault, please consult with manufacture.
<b>F04</b>	Over temperature (alarm light on)	Inverter operate environment is very bad, insufficient ventilation and indoor temperature is very high. Close the inverter and wait for 10 minutes, after inverter cool, start again.
<b>F05</b>	Low battery voltage (alarm light on)	Battery damage; Battery deeply discharged, so need to charge again; battery problem, please replaces the battery. Inverter charger no work, please consult manufacture.
<b>F06</b>	Reverse input (alarm light on)	Connect input and output again in correct way.
<b>F07</b>	Semi-wave short circuit (unusual load)	The connecting load power is over than inverter's rated power, after reduce load equipments quantity, inverter will work again.
<b>F08</b>	Over charge (alarm light on)	Battery type selection incorrect; Charger damage, please consult manufacture for help.
<b>F09</b>	Battery over voltage (alarm light on)	Check if battery bank dc voltage is corresponding to this inverter requested dc voltage.

# SPECIFICATIONS

Table 7. Line Mode Specifications

MODEL	GW Plus1~12KW	
Rated power	1 ~ 12KW(230VAC)	1 ~ 6KW(120VAC)
Input Voltage Waveform	Sine wave(Utility or Generator)	
Nominal Input Voltage	230Vac	120Vac
Low Line Disconnect	184Vac±4%(NOR)	85Vac±4%(NOR)
	135Vac±4%(WID)	80Vac±4%(WID)
Low Line Re-connect	194Vac±4%(NOR)	95Vac±4%(NOR)
	145Vac±4%(WID)	85Vac±4%(WID)
	Note: 1.NOR setting can be used for general electrical appliance 2. WID setting can be used only for some special load, Such as lamp, fan.	
High Line Disconnect	263Vac±4%(NOR)	136Vac±4%(NOR)
	263Vac±4%(WID)	140Vac±4%(WID)
High Line Re-connect	253Vac±4%(NOR)	131Vac±4%(NOR)
	253Vac±4%(WID)	135Vac±4%(WID)
Max AC Input Voltage	270VAC	150VAC
Nominal Input Frequency	50Hz / 60Hz (Auto detection)	
Low Line Frequency Disconnect	40+0.3Hz for 50Hz, 50+0.3Hz for 60Hz	
Low Line Frequency Re-connect	41+0.3Hz for 50Hz, 51+0.3Hz for 60Hz	
High Line Frequency Disconnect	55+0.3Hz for 50Hz, 65+0.3Hz for 60Hz	
High Line Frequency Re-connect	54+0.3Hz for 50Hz, 64+0.3Hz for 60Hz	
Output Voltage Waveform	As same as Input Waveform	
Output Short Circuit Protection	Air switch	
Efficiency (Line Mode)	>97%	
Transfer Time	15ms (typical) 20ms max(WID)	
Bypass charger enable in off mode	Yes	

Note: NOR – Normal range; WID-Wide range

**Table 8. Invert Mode Specifications**

<b>MODEL</b>	<b>HV Model: GW Plus1-12KW</b> <b>LV Model: GW Plus1-6KW</b>		
<b>Output Voltage Waveform</b>	Pure Sine Wave		
<b>Rated Output Power</b>	1 ~ 12KW(230VAC)	1 ~ 6KW(120VAC)	
<b>Power Factor</b>	0.9 - 1.0		
<b>Nominal Output voltage</b>	230Vac	120Vac	
<b>Minimum Peak Output Voltage at Rated Power</b>	>200V	>100V	
<b>Output Frequency(Hz)</b>	50Hz / 60Hz ± 0.3Hz		
<b>Output Voltage Regulation</b>	±10%		
<b>Nominal Efficiency</b>	>87% (@Normal DC Input; >60% R load)		
<b>Over-Load Protection</b>	105% <load<150%, beeps 0.5s every 1s, and Fault after 60s. Load>150%, beeps 0.5s every 1s, and Fault after 20s.		
<b>Capable of starting electric motor</b>	YES		
<b>Output Short Circuit Protection</b>	Current limit (Fault after 10s), Air switch		
<b>Power saver</b>	Load ≤ 25 ±5W (Enabled on "P/S auto" setting of Remote control)		
<b>DC voltage</b>			
<b>Nominal DC Input Voltage</b>	12VDC	24VDC	48VDC
<b>Min DC start voltage</b>	10.5Vdc	21Vdc	42Vdc
<b>Low DC Alarm</b>	10.5Vdc ± 0.2Vdc	21Vdc ± 0.4Vdc	42.0 ± 0.8Vdc
<b>Low DC Shut-down</b>	10.0Vdc ± 0.2Vdc	20Vdc ± 0.4Vdc	40.0 ± 0.8Vdc
<b>Low DC Shut-down Recovery</b>	11.0Vdc ± 0.2Vdc	22Vdc ± 0.4Vdc	44.0 ± 0.8Vdc
<b>High DC Shut-down</b>	16.0Vdc ± 0.2Vdc	32Vdc ± 0.4Vdc	64.0 ± 0.8Vdc
<b>High DC Shut-down Recovery</b>	15.5Vdc ± 0.2Vdc	31Vdc ± 0.4Vdc	62.0 ± 0.8Vdc

**Table 9. AC Charger Mode Specifications**

<b>Nominal Input Voltage</b>	230Vac	120Vac
<b>Input Voltage Range</b>	194V~253Vac(NOR) 160V~253Vac(WID)	95V~131Vac(NOR) 85V~135Vac(WID)
<b>High Voltage Disconnect</b>	253Vac±4%(NOR) 253Vac±4%(WID)	131Vac±4%(NOR) 135Vac±4%(WID)
<b>High Line Re-connect</b>	248Vac±4%(NOR) 248Vac±4%(WID)	128Vac±4%(NOR) 132Vac±4%(WID)
<b>Low Voltage Disconnect</b>	194Vac±4%(NOR) 160Vac±4%(WID)	95Vac±4%(NOR) 85Vac±4%(WID)
<b>Low Line Re-connect</b>	200Vac±4%(NOR) 165Vac±4%(WID)	98Vac±4%(NOR) 88Vac±4%(WID)
<b>Nominal Output Voltage</b>	According to the battery type	
<b>Nominal Charge Current</b>	12VDC model: Max 90A	
	24VDC model: Max 70A	
	48VDC model: Max 50A	
<b>Charge current tolerance</b>	±5A	
<b>Over Charge Protection</b>	Bat. V ≥15.5Vdc, Fault, Buzzer alarm for 12Vdc Bat. V ≥31.0Vdc, Fault, Buzzer alarm for 24Vdc Bat. V ≥61.0Vdc, Fault, Buzzer alarm for 48Vdc (beeps 0.5s every 1s & fault after 60s)	
<b>Charge Algorithm</b>	<b>Three stage:</b> <b>Boost CC</b> (constant current stage) → <b>Boost CV</b> (constant voltage stage) → <b>Float</b> (constant voltage stage)	

Note: NOR – Normal range; WID-Wide range

**Table 10. Solar Charger Mode Specifications**

<b>Rated Battery voltage</b>	<b>12VDC</b>	<b>24VDC</b>	<b>48VDC</b>
<b>Rated charge current</b>	40A	40A	40A
<b>Input voltage range</b>	15-40Vdc	25-55Vdc	50-110Vdc
<b>Max. PV open circuit array voltage</b>	40Vdc	55Vdc	110Vdc
<b>Max. recommended input power (W)</b>	600W	1200W	2350W

<b>Rated Battery voltage</b>	<b>12VDC</b>	<b>24VDC</b>	<b>48VDC</b>
<b>Rated charge current</b>	60A	60A	60A
<b>Input voltage range</b>	15-40Vdc	25-55Vdc	50-110Vdc
<b>Max. PV open circuit array voltage</b>	40Vdc	55Vdc	110Vdc
<b>Max. recommended input power (W)</b>	900W	1750W	3500W



**Table 11. General Specifications**

<b>MODEL</b>	<b>GW Plus1-3KW</b>				<b>GW Plus4-6KW</b>			<b>GW Plus8-12KW</b>		
<b>Indicators</b>	LED+LCD Display									
<b>Protections</b>	Low battery, over charging, over load, over temp.									
<b>Remote control</b>	YES									
<b>Operating Temperature Range</b>	0°C ~ 40°C									
<b>Storage temperature</b>	-15° C ~ 60° C									
<b>Operation humidity</b>	5% ~ 95% (non-condensing)									
<b>Earthing(ABYC standard)</b>	Follow customer requirement: Inverter mode: the neutral and the earth joined ; Line mode: the neutral and the earth separated. Use a Relay to realize the function.									
<b>Audible Noise</b>	65dB max									
<b>Cooling</b>	Forced air, variable speed fan									
<b>Size (L*W*H mm)</b>	482.5*336.5*189.5				517.5*396.5*189.5			627.5*416.5*204.5		
<b>MODEL</b>	1K	1.5K	2K	3K	4K	5K	6K	8K	10K	12K
<b>Net weight (Kg)</b>	22.0	23.0	24.0	28.0	30.5	35.5	38.5	48.0	55.0	62.0

Product specifications are subject to change without further notice.

# APPENDIX A

## How to Select and Configure PV Panels

The following parameters can be found in each PV panel's specification:

- $P_{max}$ : Max output power (W)
- $V_{mp}$ : max power voltage (V)
- $V_{oc}$ : open-circuit voltage (V)
- $I_{mp}$ : max power current (A)
- $I_{sc}$ : short-circuit current (A)

PV panels can be connected in series or parallel in order to obtain the desired output voltage and current which meets the inverter's allowed range.


When connecting PV panels in series, the max voltage and current of the string is



$$V_{string} = V_1 + V_2 + V_3 + V_4 \dots$$

$$I_{string} = I_1 = I_2 = I_3 = I_4$$

When connecting the above PV string in parallel, the max voltage and current of the total string is

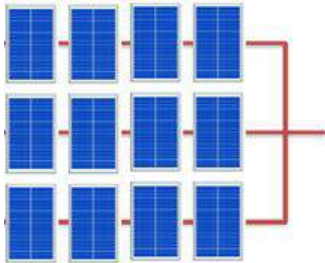

$$V_{total} = V_{string1} = V_{string2} = V_{string3} = V_{string4} \dots$$

$$I_{total} = I_{string1} + I_{string2} + I_{string3} + I_{string4}$$

In either case, the total output power is  $P_{total} = P_{panel} \times \text{Number of PV panel}$

The guideline to select and configure PV string is

- $P_{total}$  shall be equal or slightly larger than the max. capacity of solar battery charger (900W for 3000VA model and 2600W for 5000VA model). Surplus capacity of PV string does not help the solar charger's capacity and only result in higher installation cost.
- Total  $V_{mp}$  of the string shall be within the operating voltage range of solar battery charger (60~72V for 3000VA model and 120~144V for 5000VA model are recommended).
- Total  $I_{mp}$  of the string shall be less than the max. input charging current of the solar battery charger (20A for 3000VA and 30A for 5000VA model)
- Total  $V_{oc}$  of the string shall be less than the max. PV input voltage of the solar battery charger (75V for 3000VA and 150V for 5000VA model).
- Total  $I_{sc}$  of the string shall be less than the max. PV input current of the solar battery charger (20A for 3000VA and 35A for 5000VA model).

### Example 1 - How to connect 3000VA model to PV panels with the following parameters?

- $P_{max}$ : 260W
- $V_{mp}$ : 30.9V
- $V_{oc}$ : 37.7V
- $I_{mp}$ : 8.42A
- $I_{sc}$ : 8.89A


- (1) The max. PV input power for 3000VA model is 900W,  
 $900W / 260W = 3.46 \Rightarrow$  min. 4 PV panels shall be connected.
- (2) Best Operating Voltage Range is 60~72V,

$72V/30.9V = 2.33 \Rightarrow$  max. number of PV panel in series is 2.

(3) Max. input charging current is 20A,

$20A/8.42A = 2.37 \Rightarrow$  max. number of PV panel in parallel is 2.

(4) Taking (1)~(3) into consideration, the optimized configuration is 2 PV panels in series as a string and 2 strings in parallel, as shown below.

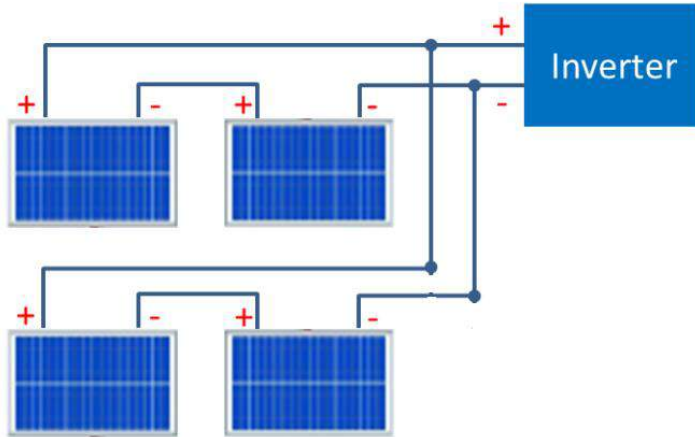

(5) Check again the  $V_{oc}$  and  $I_{sc}$  of PV string,

$V_{oc}$  of string is  $61.8V < 75V$  (Max. PV Input Voltage)  $\Rightarrow$  OK

$I_{sc}$  of string is  $2 \times 8.89A = 17.78A < 20A$  (Max. PV Input Current)  $\Rightarrow$  OK

### Example 2 - How to connect 5000VA model to PV panels with the following parameters?

- $P_{max}$ : 260W
- $V_{mp}$ : 30.9V
- $V_{oc}$ : 37.7V
- $I_{mp}$ : 8.42A
- $I_{sc}$ : 8.89A

(1) The max. PV input power for 5000VA model is 2600W,

$2600W / 260W = 10 \Rightarrow$  min. 10 PV panels shall be connected.


(2) Best Operating Voltage Range is 110~144V,

$144V/30.9V = 4.66 \Rightarrow$  max. number of PV panel in series is 4.

(3) Max. input charging current is 30A,

$30A/8.42A = 3.56 \Rightarrow$  max. number of PV panel in parallel is 3.

(4) Taking (1)~(3) into consideration, the optimized configuration is 4 PV panels in series as a string, and 3 strings in parallel (as shown below).

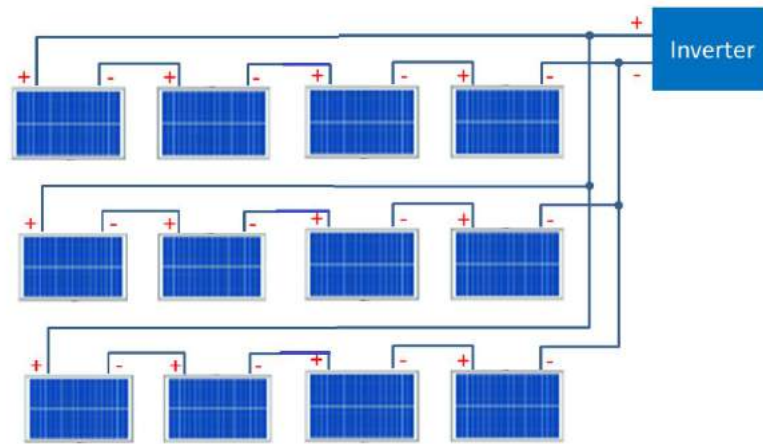

(5) Check again the  $V_{oc}$  and  $I_{sc}$  of PV string,

$V_{oc}$  of string is  $4 \times 30.9V = 123.6V < 150V$  (Max. PV Input Voltage)  $\Rightarrow$  OK

$I_{sc}$  of string is  $3 \times 8.89A = 26.67A < 30A$  (Max. PV Input Current)  $\Rightarrow$  OK

## DISPOSAL

In the event the product reaches the end of its service life, please contact the local dealer for disposal instructions.



**The product must not be disposed of with the household waste.**



Disposal of the product at the end of its service life shall be done in accordance with applicable disposal regulations for electronic waste.